

BeSafe SIS


Assembling the cardboard display



STEP 1: Control that you have all parts





PART OVERVIEW

1. 2x Sides_cardboard
2. 2x Shelves_cardboard
3. 4x Feet_plywood
4. 1 x \varnothing 35 mm wooden stick L740 mm with 2 holes
5. 1x \varnothing 25 mm wooden stick L630 mm (top bar)
6. 2x \varnothing 25 mm wooden stick L1660 mm (verticals)
7. 1x torso_plywood
8. Bag with 2 wood screws and 16 cardboard screws, 2 transparent strips/cable ties

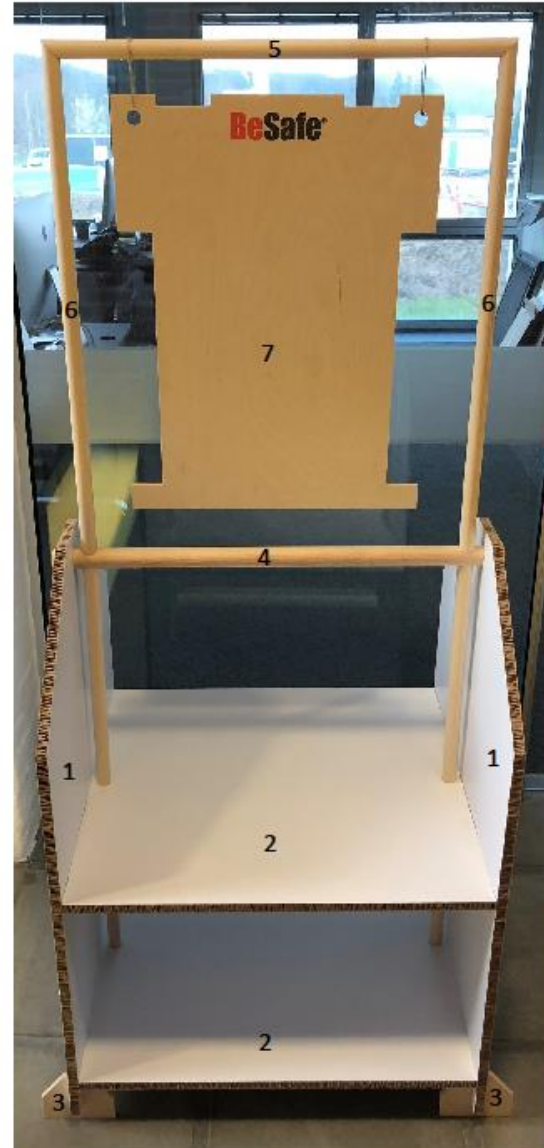


STEP 2: Assembling the cardboard

1. Carefully press sides and shelves together.
2. Place and tighten screws – 8 pcs on each side.

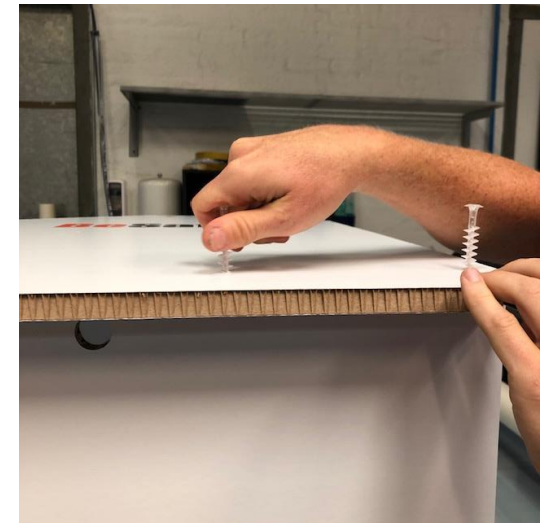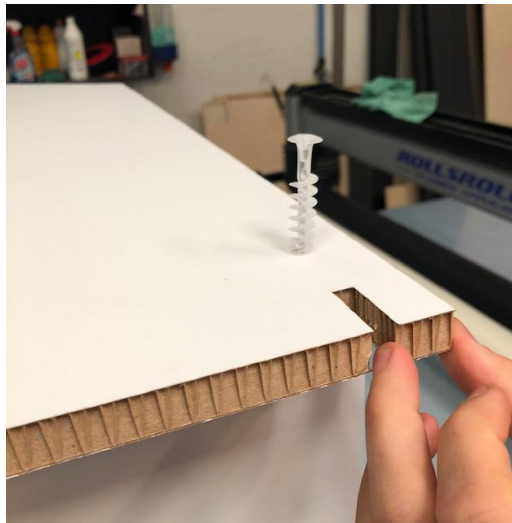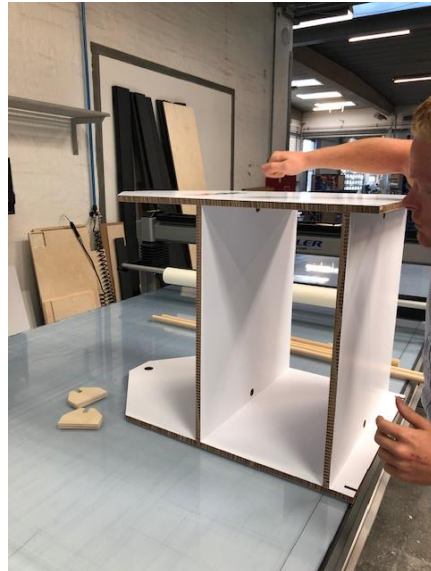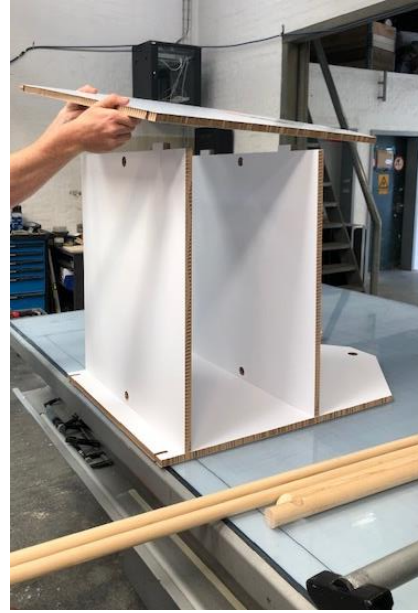

STEP 3: Mounting the wooden parts

1. Mount the feet by carefully pressing them on to the cardboard sides, 4 pcs.
2. Put the middle wooden stick through the hole in the sides.
3. Mount the vertical sticks through holes. (middle stick and shelves)
4. Place the top bar on the verticals and tighten the 2 wooden screws from the top.

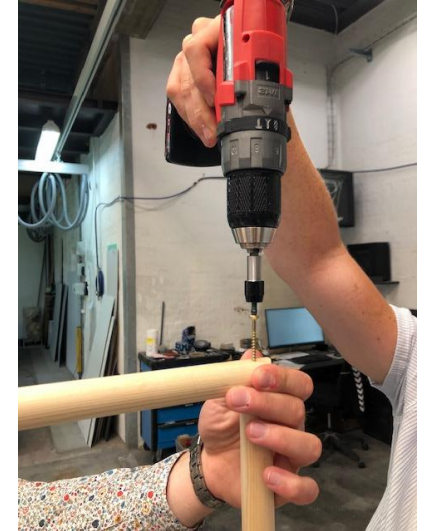

STEP 4: Hanging the torso

1. Find the torso board
2. Find the 2 transparent strips/cable ties
3. Mount 1 strip/cable tie through each hole and over the top bar
4. Cut of excess length of the strips/cable ties

