


Demo Seat




0 Preparation

- Protection film may be present on the wooden parts. It is useful to heat up the film with a blow dryer while removing it.

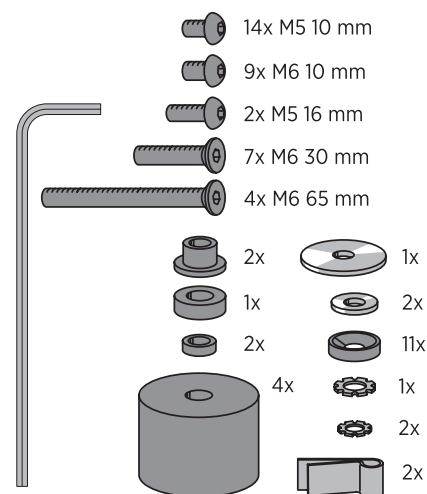




1 Sliding rails

- Identify the left and right seat frame side panel by checking the bolt holes (see white arrows).
- Use 2 bolts to connect the sliding rails to the base frame panel.
- Repeat on the other side.

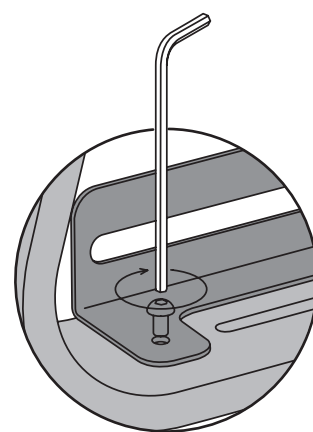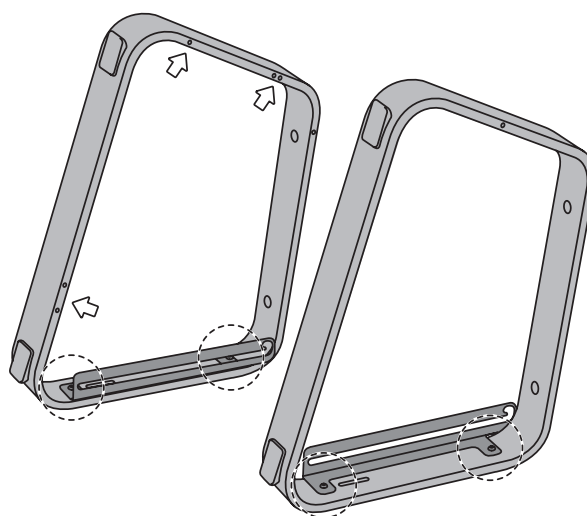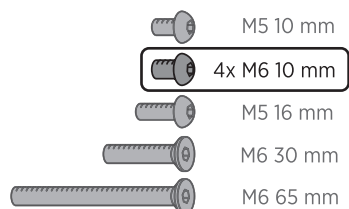



2 Ground plate

- Use 4 bolts to connect the ground plate to the base frame panels.

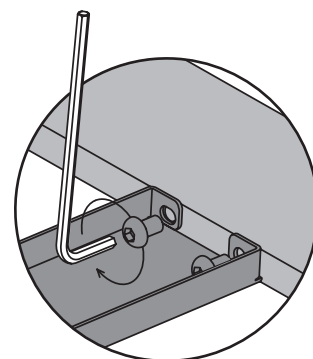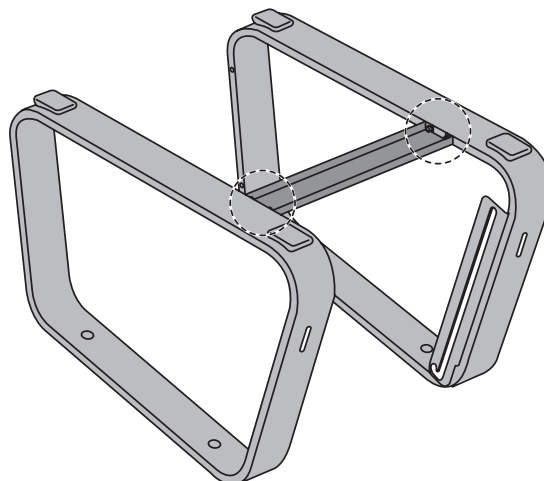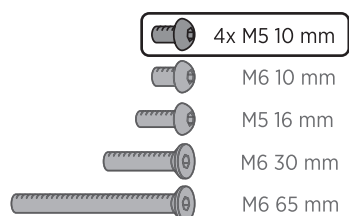



3 Construction bracket

- Turn the base frame right side up.
- Use 4 bolts to connect the construction bracket to the base frame panels.

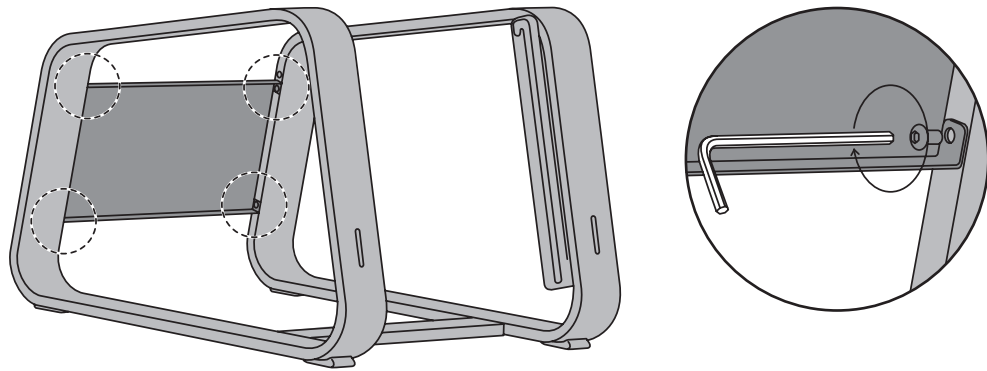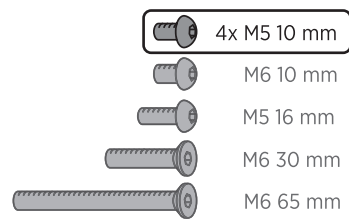



5 Leg support

- Use 2 bolts to connect the bracket to the leg support.
- Slide the bearing over the protrusion.
- Repeat on the other side.

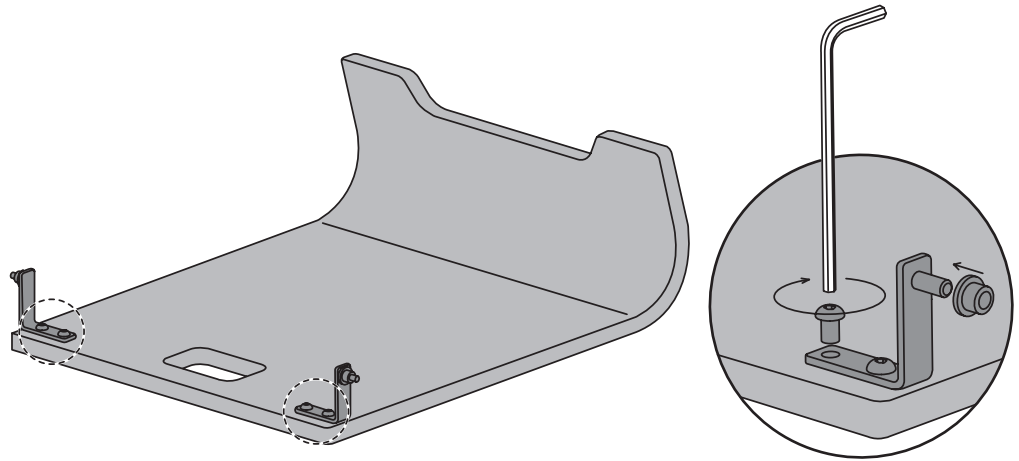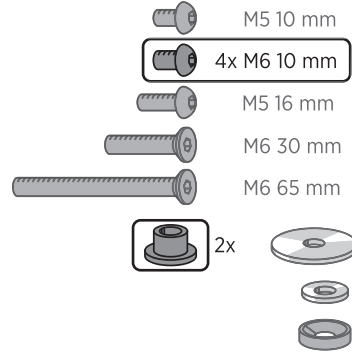



4 Back support

- Place the back support on a table.
- Identify the left and right seat frame side panel by checking the bolt holes (see white arrows).
- Line up the seat frame side panel and connect them to the back support with 2 bolts and 2 bevel washers.
- Repeat on the other side.

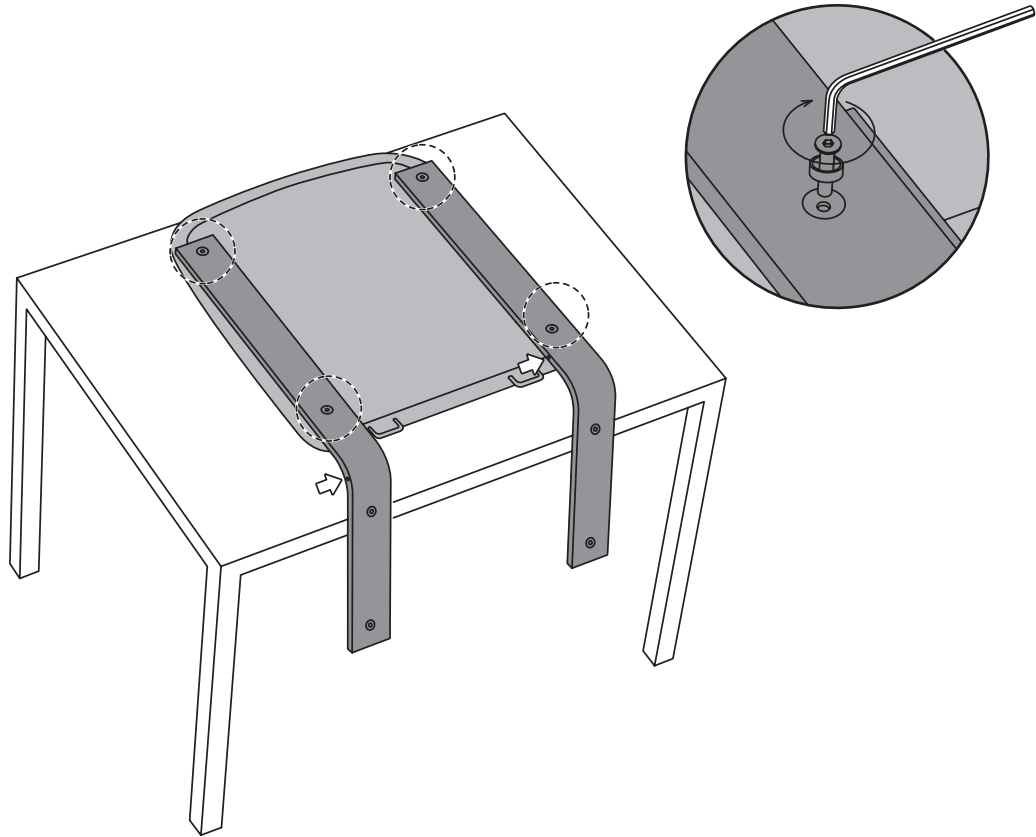
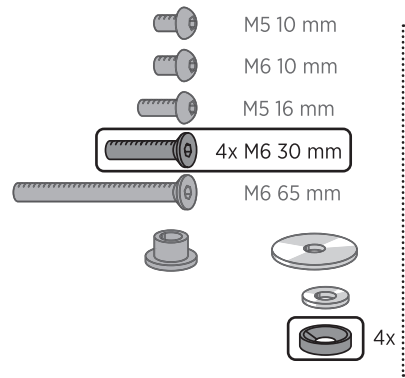


6 Main assembly


- Place the seat cushion upside down on a table.
- Place a lamello biscuit in each slot.
- Slide the back rest panels onto the lamello biscuits of the seat cushion.

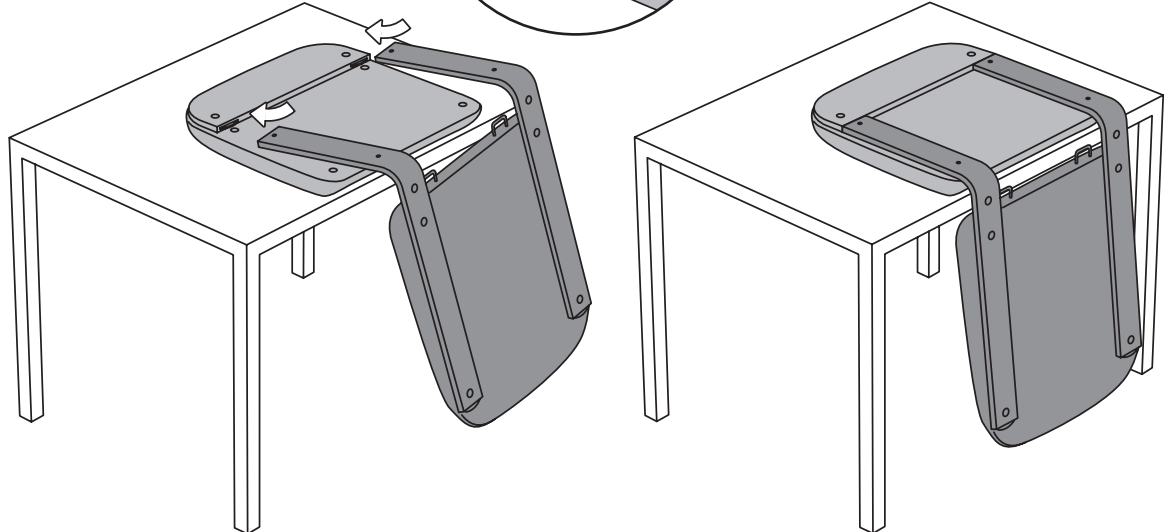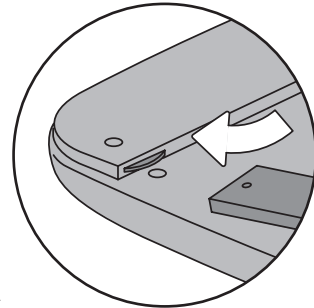



- Place 4 spacers on the corresponding holes.

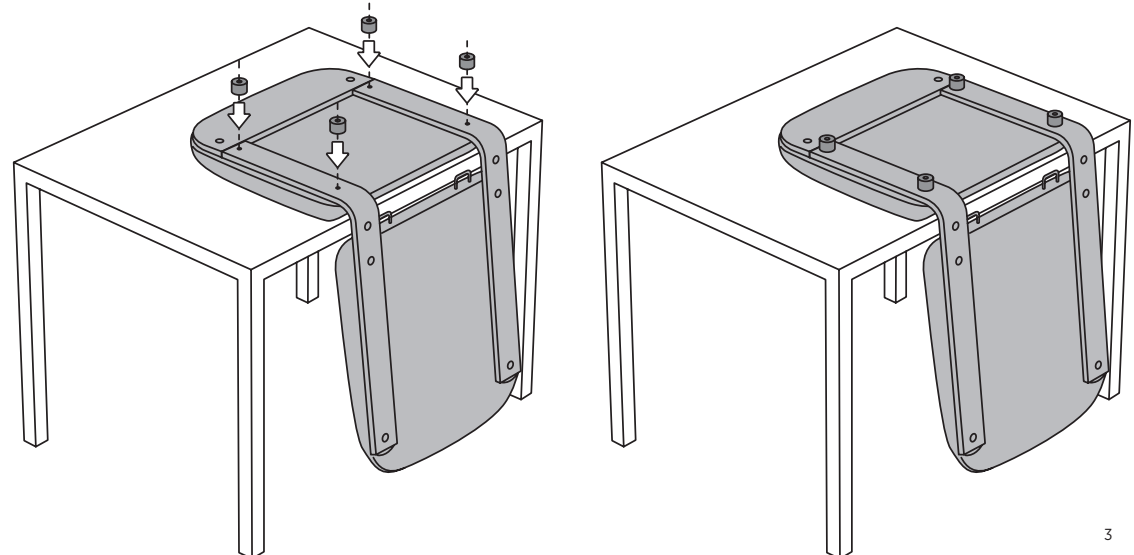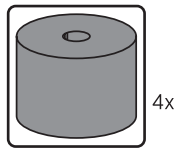

- Line up the base frame over the 4 holes in the back support.


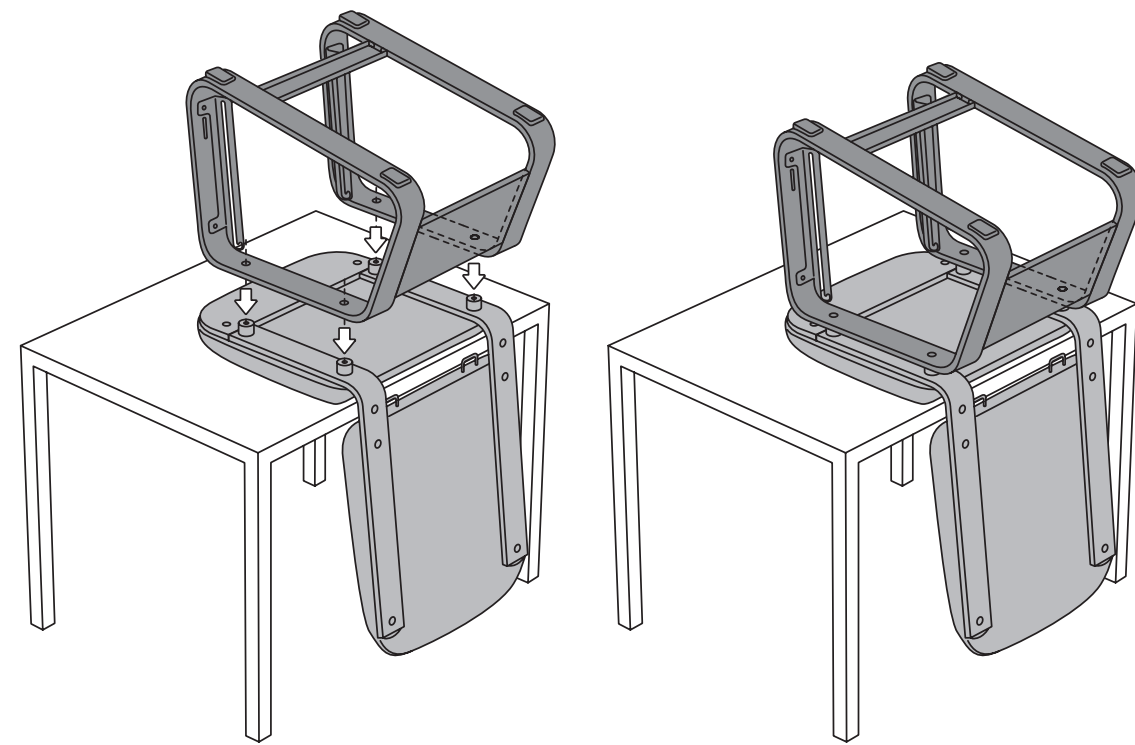


- Use 4 bolts and 4 bevel washers to connect the base frame to the back support and the seat support.

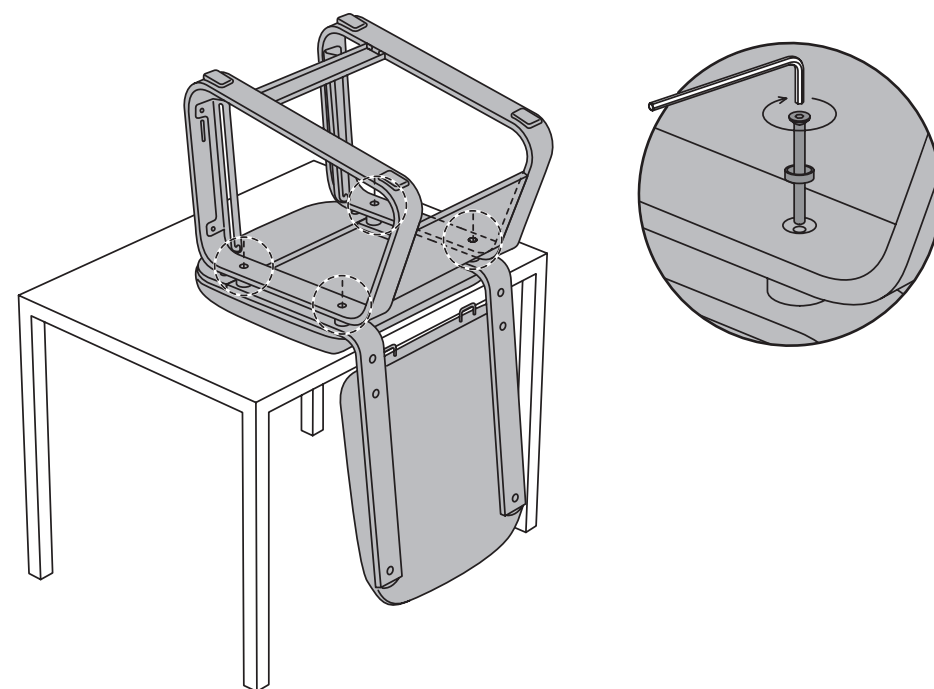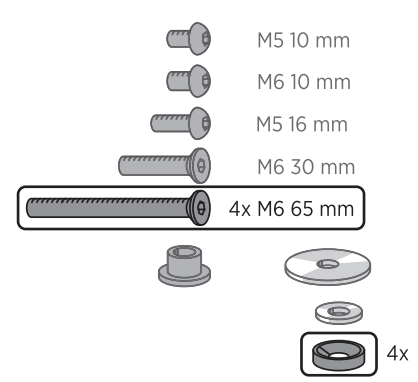



7 Head board

- Lift the Demo Seat off the table and put it on the ground.
- Slide the head board over the biscuits in the back support frame panels.
- Use 3 bolts and 3 bevel washers to connect the headboard to the back support.

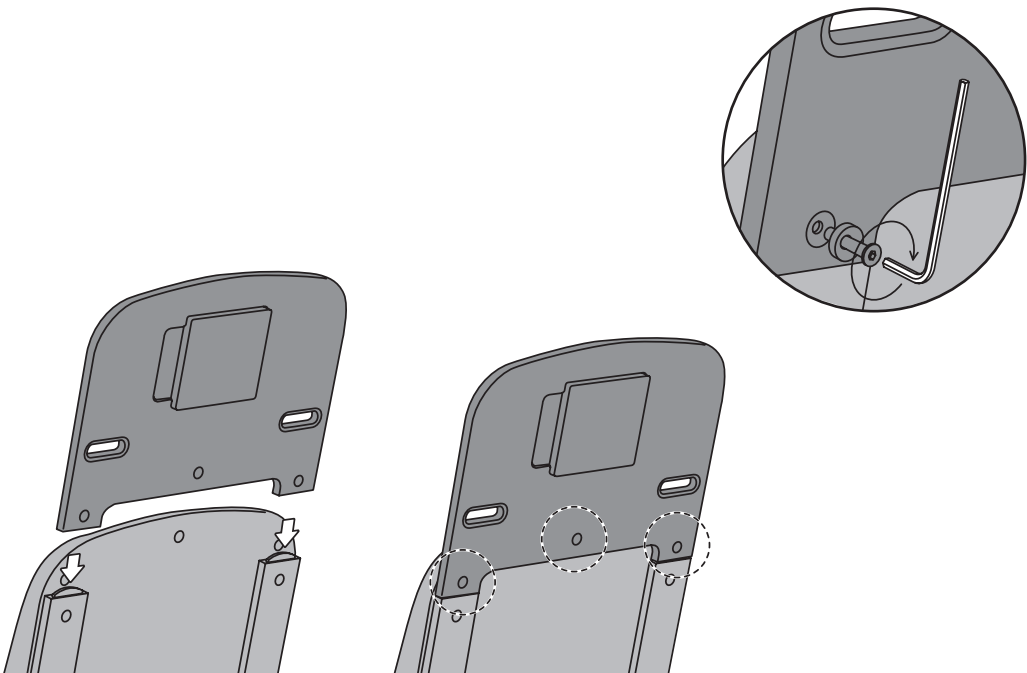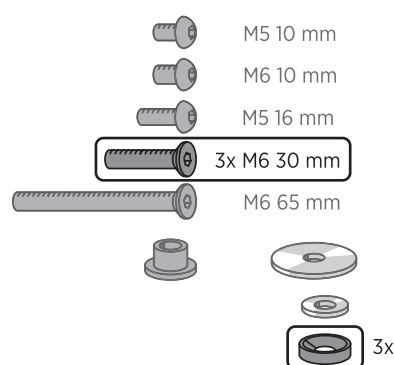



8 Display

- Insert the plug of the power adapter into the socket of the display.
- Loosen the 2 bolts a little.
- Place 3 aluminium clips around the cable and slide the clips between the side panels and the fabric.
- Refasten the 2 bolts.

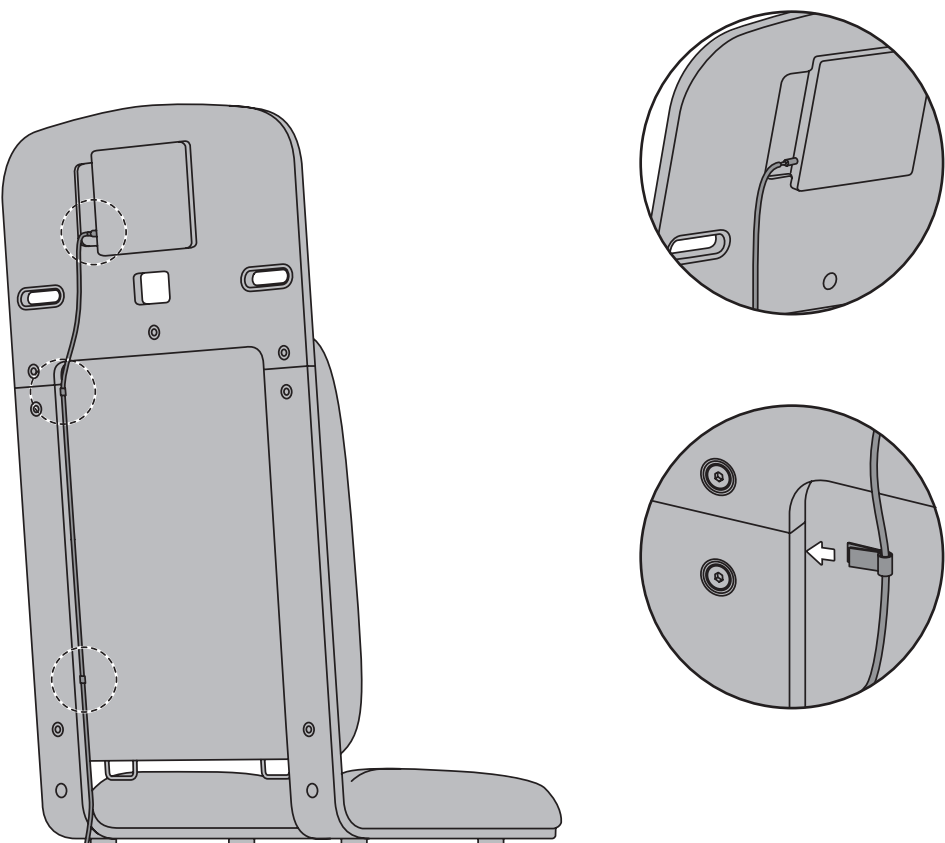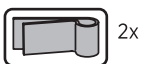


9 Retractor



- The retractor can be mounted on both sides.
- Use a bolt, a locking washer, a washer and a spacer to mount the retractor.

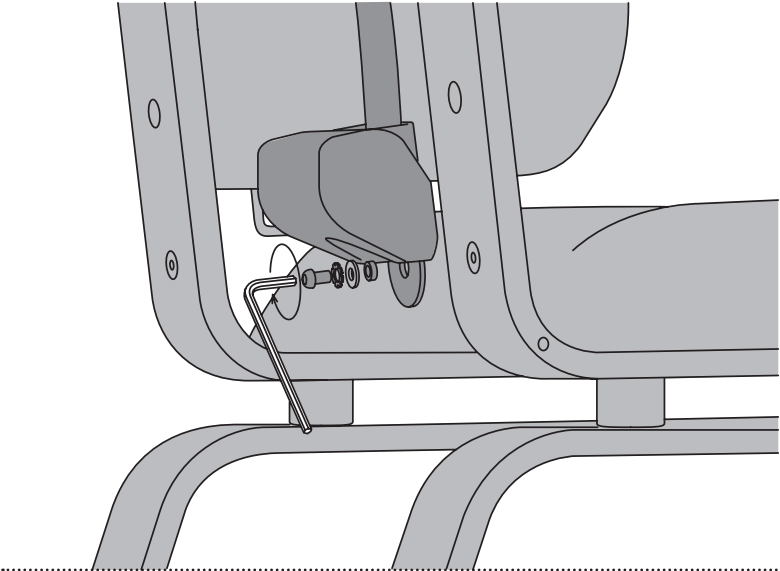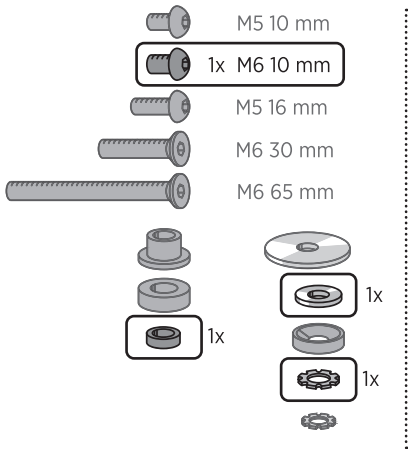

- Lead the car belt through the hole in the head board.


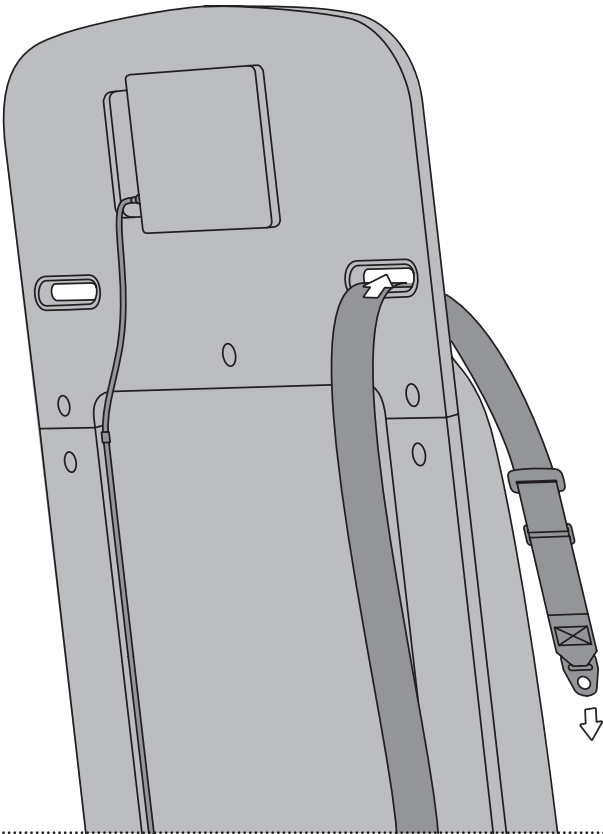


- Use a bolt, a locking washer, a washer and a spacer to mount the car belt bracket.

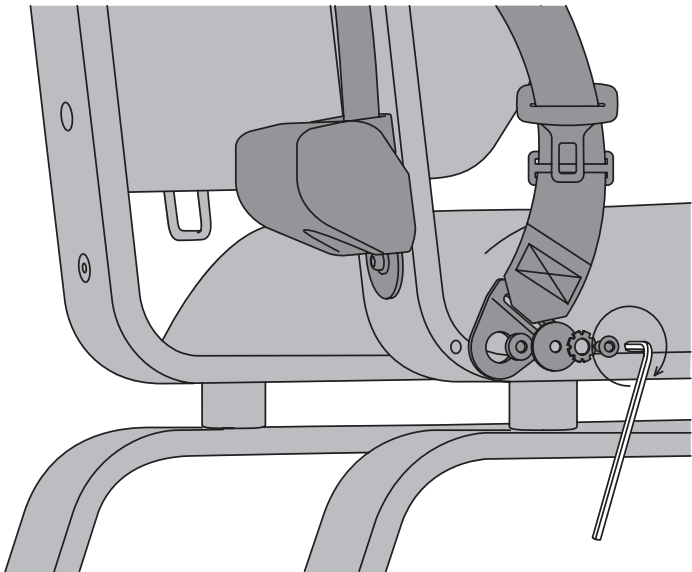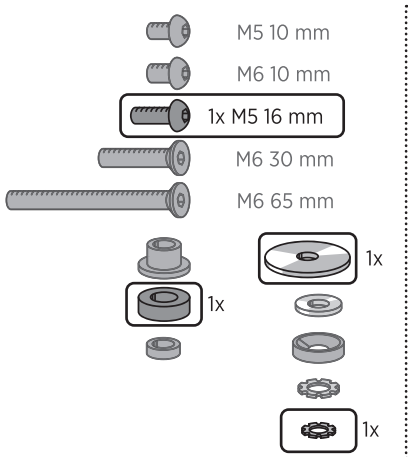



10 Buckle

- Use a bolt, a locking washer, a washer and a spacer to mount the buckle on the other side of the Demo Seat.

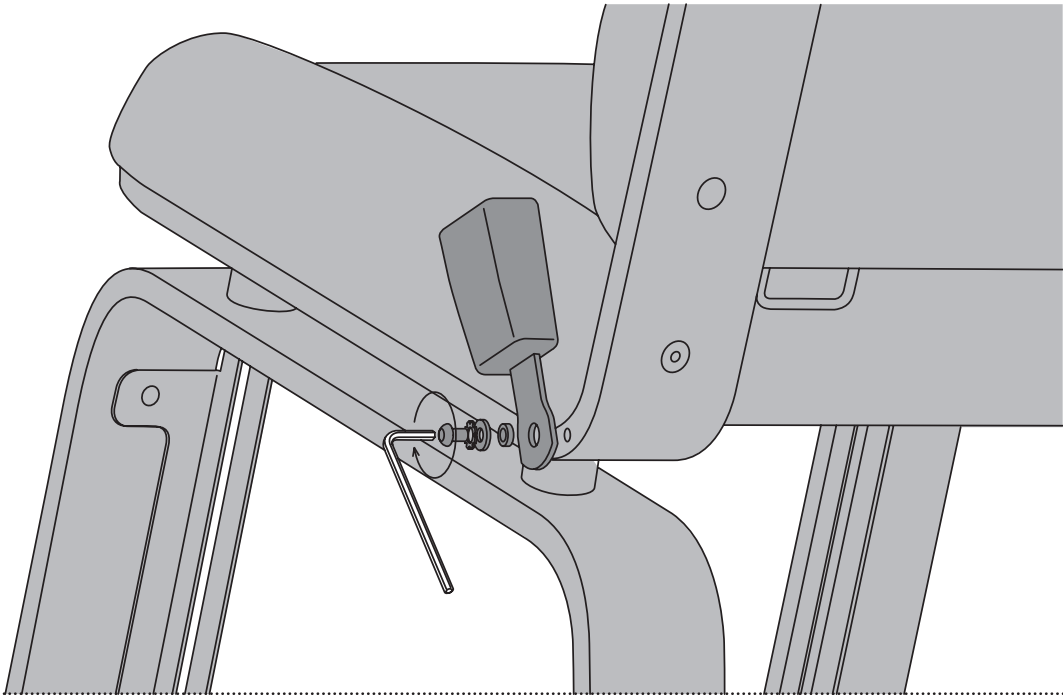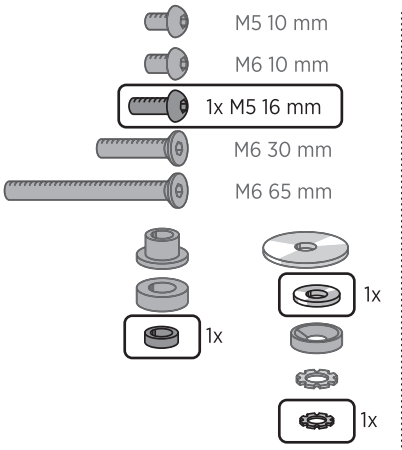




11 Reinforcement bracket

- Use 3 bolts to connect the reinforcement bracket to the side frame panels.
- Repeat on the other side.

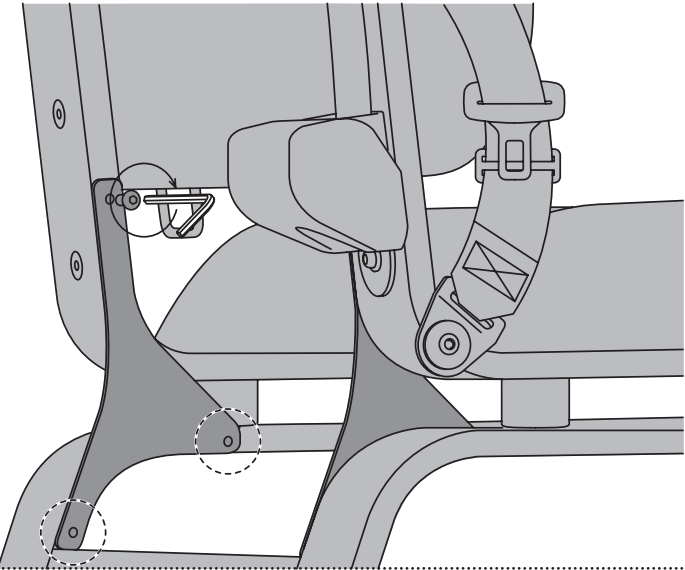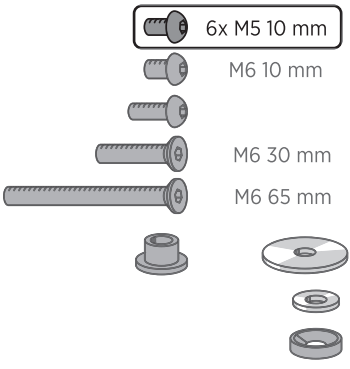

12 Leg support

- Place the brackets of the leg support in the sliding rails.

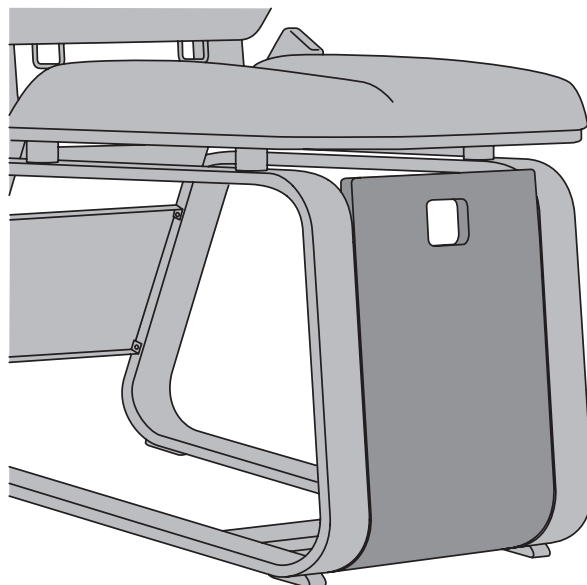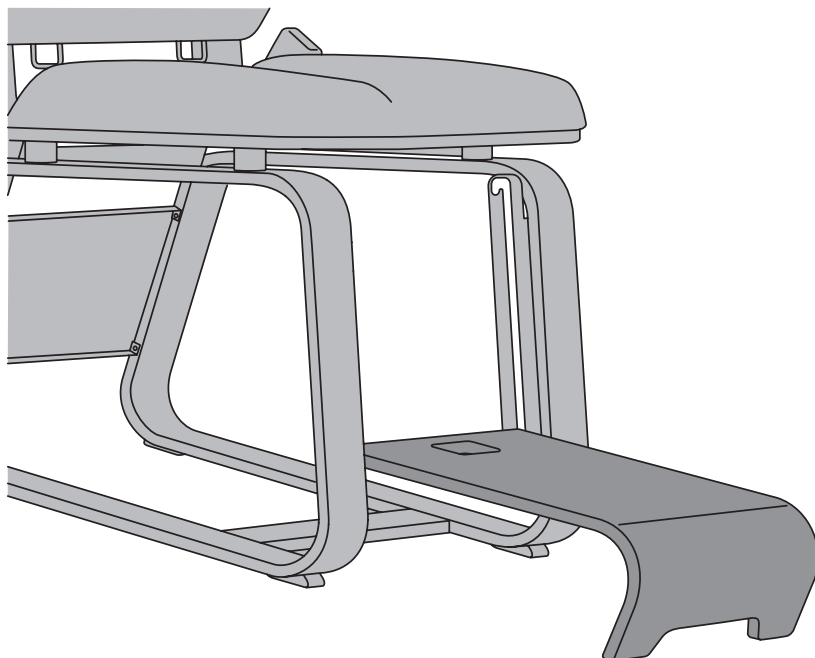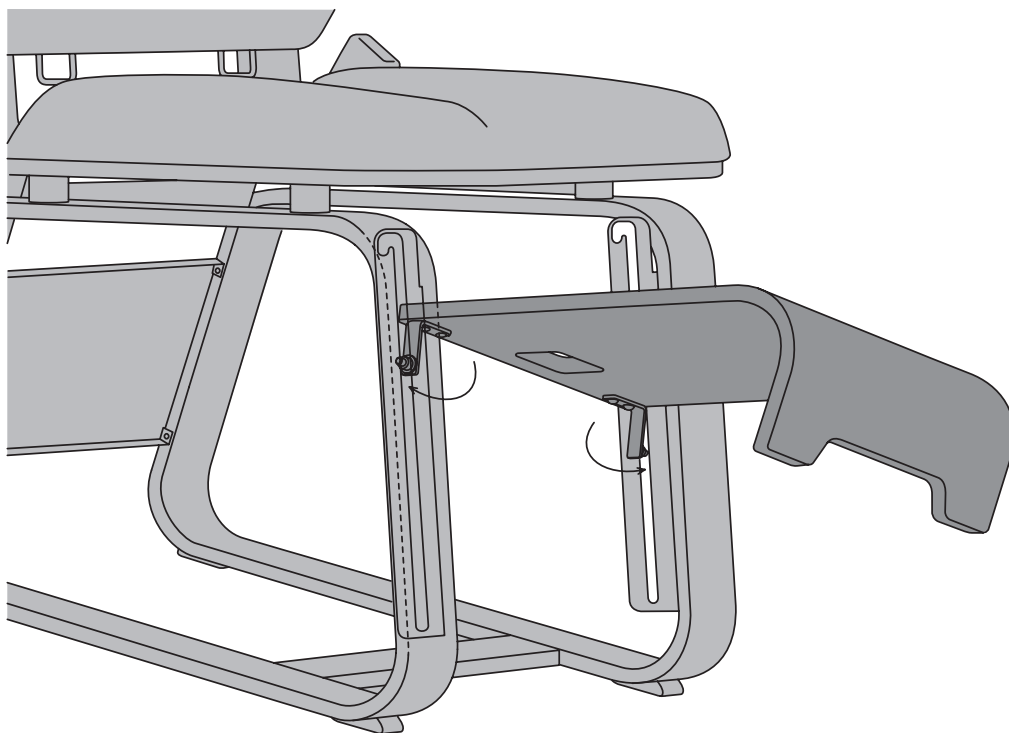

13 Folder display

- Peel off the paper backing of the tape at the back of the folder display.
- Place the folder display on the DemoSeat.

